 


DENVER[®]

CAD-451 BLUETOOTH

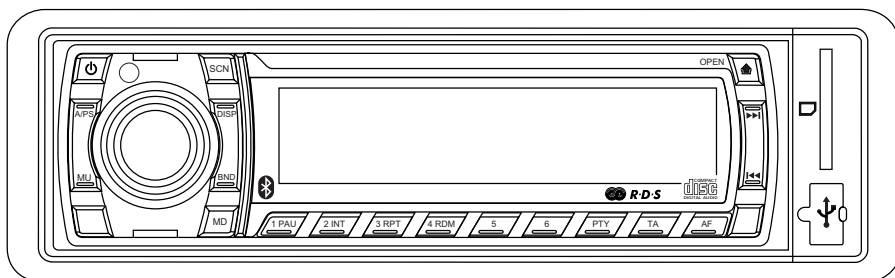

INSTRUCTION MANUAL

CAR STEREO CD/CDR/CDRW/MP3 PLAYER
WITH PLL FM STEREO RADIO

 
RDS

USB / SD / MMC CARD INPUT



BLUETOOTH FUNCTION

FLIP DOWN/DETACHABLE FRONT PANEL

LOCATION OF PARTS AND CONTROLS

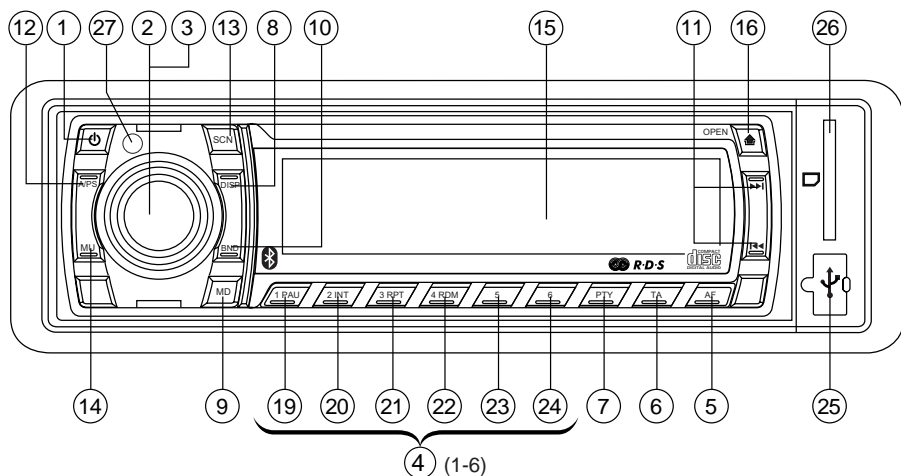

1. POWER ON/OFF ()
2. FUNCTION SELECT BUTTON: BASS/TREBLE/BALANCE/ FADER / TA SEEK/MASK DPI/RETUNE/AUDIO DSP/ LOUDNESS/ESP/CD MULTI/BEEP/SEEK/STEREO/LOCAL (SEL)
3. VOL UP/VOL DOWN FOR BASS/TREBLE/BALANCE/ FADER / TA SEEK/MASK DPI/RETUNE/AUDIO DSP/ LOUDNESS/ESP/CD MULTI/BEEP/SEEK/STEREO/LOCAL
4. PRESET STATIONS (1,2,3,4,5,6)
5. 'AF' function (ALTERNATIVE FREQUENCIES)
6. 'TA' function (TRAFFIC ANNOUNCEMENT)
7. 'PTY' function (PROGRAM TYPE)
8. DISPLAY BUTTON (DISP)
9. MODE BUTTON (MD)
10. BAND BUTTON (BND)
11. AUTOMATIC OR MANUAL TUNING (FREQ UP OR FREQ DOWN / CD TRACK/SEARCH BUTTON
12. AUTO SEEK SEARCH TUNING (A/PS)
13. 'SCAN' AUTOMATIC TUNING CONTROL (SCN)
14. MUTE BUTTON (MU)
15. LCD DISPLAY
16. PANEL RELEASE BUTTON ()
17. CD SLOT
18. CD EJECT BUTTON ()
19. PAUSE BUTTON
20. INTRO BUTTON (Preview all Tracks)
21. REPEAT BUTTON
22. RANDOM BUTTON
- 23, 24. + 10 TRACK SEARCH UP/DOWN
25. USB PORT
26. MULTI-MEDIA CARD (MMC) / SD CARD SLOT
27. REMOTE SENSOR

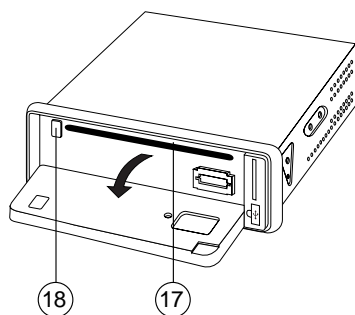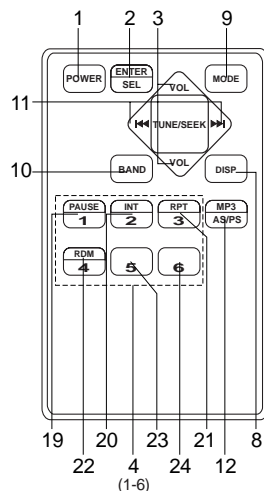  

ISO CONNECTOR

RCA Jack Line Out:

: Red (right)

: White (left)

 
RCA Jack Line In:

: Red (right)

: White (left)

CONNECTOR A

- 1.
- 2.
- 3.
4. MEMORY +12V
5. AUTO ANTENNA OUTPUT
- 6.
7. +12V (TO IGNITION KEY)
8. GROUND

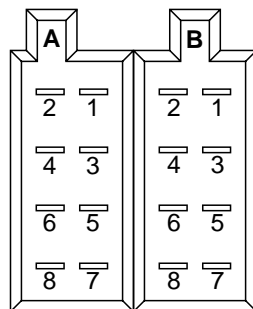

Note: (connector A no. 7) must be connected by car ignition key in order to avoid that car battery becomes weak when the car will be not used for long period.

CONNECTOR B

1. REAR RIGHT SPEAKER (+)
2. REAR RIGHT SPEAKER (-)
3. FRONT RIGHT SPEAKER (+)
4. FRONT RIGHT SPEAKER (-)
5. FRONT LEFT SPEAKER (+)
6. FRONT LEFT SPEAKER (-)
7. REAR LEFT SPEAKER (+)
8. REAR LEFT SPEAKER (-)

Maintenance

FUSE REPLACEMENT

If the fuse blows, check the power connection and replace the fuse. If the fuse blows again after the replacement, there may be an internal malfunction. In this case, consult your nearest repairing center.

Warning

 
 
Use the specified amperage fuse for each lead. Use of a higher amperage fuse may cause serious damage.

INSTALLATION

PRECAUTIONS


- Choose the mounting location carefully so that the unit will not interfere with the normal driving functions of the driver.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or hot air from the heater, or where it would be subject to dust, dirt or excessive vibration.
- Use only the supplied mounting hardware for a safe and secure installation.
- Be sure to remove the front panel before installing the unit.

NOTE : Inclination angle for car radio installation must not exceed 30° otherwise the front panel will not open.

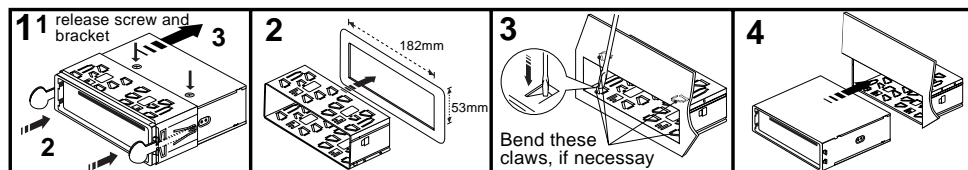

Note: Keep the release key in the safe place as you may need it in future to remove the unit from the car.

 TO SUPPORT THE UNIT

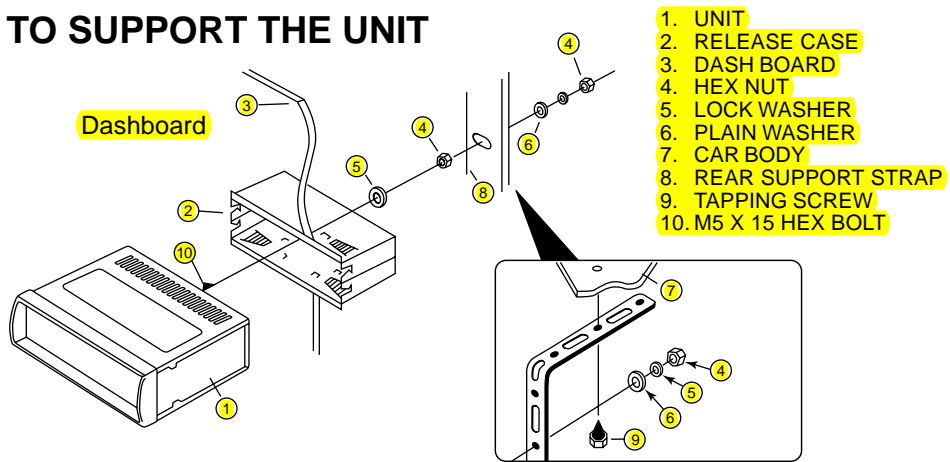


Detaching and attaching the front panel

The front panel of this unit can be detached in order to prevent the unit from being stolen.

FOLDING DOWN AND DETACHING/ATTACHING THE FRONT PANEL

 Before detaching the front panel, be sure to press the PWR button (1) OFF first. Then press the REL button (16), let the Front Panel arrive in horizontal position and detach the panel by pulling it towards you as illustrated.

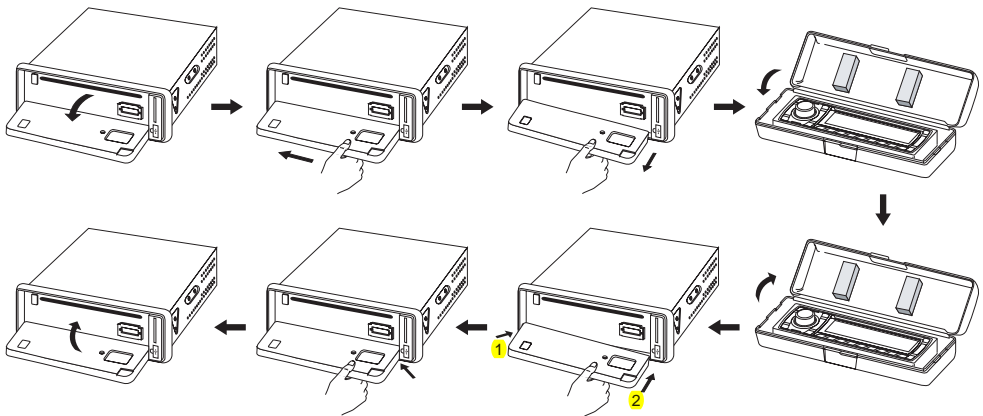

Notes:

- Do not press the front panel hard against the unit when attaching it. It can be easily attached by pressing it lightly against the unit.
- When you carry the front panel with you, put it in the supplied front panel case.
- Do not press hard or give excessive pressure to the display window of the front panel when attaching it to the unit.

1. POWER ON/OFF (PWR)

By pressing this key, the unit is on and off.
This unit is turned on by pressing any key.

2.3. FUNCTION SELECT BUTTON: BASS/TREBLE/BALANCE/FADER / TA SEEK/MASK DPI/RETUNE/ AUDIO DSP/LOUDNESS/ESP/CD MULTI/BEEP/SEEK/STEREO/LOCAL (SEL)

Turning the VOL knob Right or Left (3), you can adjust VOL/BASS/TREB/BAL/FAD. To select other functions, press the SEL (2) button shortly until the desired functions is shown on the display. Figure 1 shows how control functions are selected using the SEL button.

 


Fig. 1 Selection of sound control functions

1. VOL

2. SEL

 
3. BAS

4. TRE

5. BAL

6. FAD


Turning the VOL knob Right or Left. Increase or decrease the volume by turning. These buttons can be used to adjust the BASS, TREBLE, BALANCE and FADER.



TA SEEK/TA ALARM (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.

 TA SEEK Mode or TA ALARM mode is selected by



- TA SEEK mode:

When newly turned station does not receive TP information for 5 sec., the radio retunes to next station which has not the same station (PI) as the last station, but has the TP information.

In TA seek mode, the current station can be changed to the completely different station because the unit searches TP station when the field strength of the current station is very weak, or the current station has no TP signal.

- TA ALARM mode:

Any automatic retune mode is not activated, just can hear Beep sound.

MASK DPI (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



MASK DPI: masked only the AF which has different PI.

MASK ALL: masked the AF which has different PI and NO RDS signal with field strength.

RETUNE L / S CONTROLS (2)

When press the SEL button for more than 2 seconds, it is activated as selecting Retune mode.

 
RETUNE L: Select 90 seconds as the initial time of automatic TA search.

RETUNE S: Select 30 seconds as initial time.



AUDIO DSP CONTROLS (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



LOUDNESS CONTROLS (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



LOUD ON/OFF mode is selected by or . The bass and treble response will be boosted.

 
ESP MODE (2)

When press the SEL button for more than 2 seconds, it is activated as 12 sec. or 45 sec. of ESP mode can be selected.



MULTI CD SECTION MODE (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



CD MULTI ON/OFF mode is selected by or . CD MULTI ON: Read multi section CD. CD MULTI OFF: Read first section only.

BEEP MODE (2)

 
When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



BEEP ON: BEEP sound can be heard from speaker when the buttons are pressed.

SEEK MODE (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



SEEK 1: When SEEK 1 mode is activated, AUTO SEEK SCAN is stopped when station is detected even user still push SEEK button.

SEEK 2: Auto SEEK SCAN is not stopped even station is detected if user push SEEK button. When release this SEEK button, then stop when station is detected.

STEREO/MONO (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



When FM stations are weak and are disturbed, listening can be improved by selecting MONO.

LOCAL/DX (2)

When press the SEL button for more than 2 seconds, it is activated as selecting mode of these function.



"Local" position in areas with strong signals to let radio stop at only strong stations during manual tuning (LOC appears). Press to Distant position in areas with weak signals to listen to all stations.

4. **PRESET STATIONS (1,2,3,4,5,6)**

(A) RADIO MODE:

When pressed short, these keys select a preset station directly. When pressed longer than 1 sec., current station is stored in preset memory bank. When PTY mode is selected, the PTY switch is shared as follows:

PTY music group ---- PTY speech group ---- OFF

MUSIC

1. POP M, ROCK M
2. EASY M, LIGHT M
3. CLASSICS, OTHER M
4. JAZZ, COUNTRY
5. NATION M, OLDIES
6. FOLK M

SPEECH

1. NEWS, AFFAIRS, INFO
2. SPORT, EDUCATE, DRAMA
3. CULTURE, SCIENCE, VARIED
4. WEATHER, FINANCE, CHILDREN
5. SOCIAL, RELIGION, PHONE IN
6. TRAVEL, LEISURE, DOCUMENT

(B) CD/MP3 PLAYER MODE:

1. PAUSE
2. INT
3. RPT
4. RDM

USING THE RDS FUNCTION

What is RDS?

The RDS (Radio Data System) is a digital information system developed by the EBU (European Broadcast Union). Piggy-backed on normal FM broadcasts, RDS offers a variety of information services and automatic retuning functions for RDS-compatible car stereos.

In 1988, RDS became available in the United Kingdom, France, West Germany, Ireland and Sweden. Test transmissions are being conducted in many other european countries. It is expected that RDS will be available in most western european countries in the near future.

5. **'AF/REG' function (ALTERNATIVE FREQUENCIES)**

When pressed short, AF/REG switching mode is selected.

When AF/REG switching mode is selected, the radio checks the signal strength of the AF all the time. When pressed long, it is activated as regional mode ON/OFF.

– Regional mode ON:

AF switching or PI SEEK is implemented to the station which have all PI codes same as current station. REG segment is turned on, in LCD display.

– Regional mode OFF

The regional code in the format of PI code is ignored when AF switching or PI SEEK is implemented.

6. **'TA' function (TRAFFIC ANNOUNCEMENT)**

When pressed short, it is activated as TA mode on or off

When TA mode is on and traffic announcement is transmitted

– When the unit is CD/MP3 mode, it will switch to radiomode temporarily.

– If the volume level was under the threshold point, it will be raised to the threshold point.

– When TP station is received, TP segment is turned on in LCD display.

7. **'PTY' function (PROGRAM TYPE)**

PTY MUSIC ---- PTY SPEECH ---- PTY OFF

While selecting PTY type, its selection is implemented by preset buttons as described in preset key. When PTY is selected, the radio starts to search corresponding PTY information, and stops if the corresponding PTY information is detected.

8. **DISPLAY (DISP)**

When this key is pressed, it is operated as the conversion of each display mode as follow.

1) In case of receiving RDS station.

RADIO MODE

PS ---- CT ---- FREQ ---- PTY

CD/MP3 PLAYER MODE

CDP ---- CT ---- PS ---- FREQ ---- PTY

2) In case of receiving NON RDS station

RADIO MODE

FREQ ---- CLOCK ----NO PTY

CD/MP3 PLAYER MODE

CDP ---- FREQ ---- CLOCK ---- NO PTY

Each display time is several seconds, and come back to 1'st position after several seconds.

Notes: • **CT** = clock time • **FREQ** = frequency • **CDP** = CD Player

9. MODE BUTTON (MD)

By pressing this key, user can select. AUX/TUNER/CD-MP3/USB or MMC/SD mode.

10. BAND BUTTON (BND)

Each band is toggled cyclically by pressing this key FM1---FM2---FM3.

11. AUTOMATIC OR MANUAL TUNING (FREQ UP ►► OR FREQ DOWN ◄◄)

(A) RADIO MODE

When pressed short, these keys are operated as MANUAL tuning mode.

When pressed longer than 1 sec., they are operated as SEEK tuning mode.

(B) CD/MP3 PLAYER MODE

When pressed short, they are operated as TRACK UP or TRACK DOWN mode.

When pressed longer than 1 sec., they are operated as CUE or REVIEW mode.

12. AUTO SEEK SEARCH TUNING (A/PS)

By pressing shortly, the radio searches for each preset station.

When field strength level is bigger than the threshold level of stop level, the radio is holding at that preset number for 5 sec. with releasing mute, and then searches again.

By pressing longer than 1 sec, and then 6 strongest stations are preset to the corresponding preset number. When AS operation is finished, the radio executes the preset scan.

13. 'SCAN' AUTOMATIC TUNING CONTROL (SCN)

This key is operated as RADIO SCAN. The operation is similar as normal search but different thing is holding 5 seconds on every station detected in RADIO SCAN mode.

14. MUTE BUTTON

Press this button to mute the sound at once. Press again to return to previous volume level.

15. LCD DISPLAY

The Liquid Crystal Display will display the current state of the unit.

16. OPEN THE FRONT PANEL

Press OPEN button and the front panel will open.

CD CONTROL LOCATION OF PARTS

11. TRACK/SEARCH BUTTON

FORWARD AND REVERSE TRACK SEARCH (or changing songs)

Press the SKIP button (◄◄ or ►►) during play to go to the desired track(song).

◄◄REVERSE ►►FORWARD

Press and hold the SKIP button (◄◄ or ►►) during play to scan the disc at high speed. When the desired music section of the disc is found, release the button. Normal play will resume.

17. CD SLOT

18. CD EJECT BUTTON

Press the EJECT button to remove the CD.

19. PAUSE BUTTON

During "PLAY", press (19) 'PAUSE' button to "PAUSE". Press it again to resume play.

20. INTRO BUTTON (Preview all Tracks)

When this button is pressed, 'INT ON' indication is displayed and the first several seconds of each track of the disc are played. Press again to stop intro and listen to track.

21. REPEAT BUTTON

When this button is pressed, 'RPT ON' indication is displayed and play of the selected track will be continually repeated until the Track repeat mode is cancelled by pressing 'REPEAT' button again.

22. RANDOM BUTTON





When this button is pressed, 'RDM ON' indication is displayed and each track of the disc are played in random instead of normal progression. To cancel RANDOM mode, press 'RANDOM' button (22) again.

23, 24. 10 TRACK UP/DOWN SELECT: (In case of MP3 files)





M5: 10 Track down / M6: 10 Track up

HOW TO SELECT MP3 FILES





1. Searching Track:

- Press "A/PS", then searching track is activated.
- Press "SEL", then the first digit is blinking.
- With "VOL  / VOL " knob, select first digit you want.
- Press "SEL", then the first digit is fixed and second digit is blinking.
- With "VOL  / VOL " knob, select 2'nd 3'rd respectively.
- Then automatically the song you selected will start.

2. Searching File Name:

- Press "A/PS" twice, then file search is activated.
- Press "SEL", then the first directory is displayed.
- With "VOL  / VOL " knob, you can select the directory you want.
- Press "SEL" again, then the directory is fixed and the first file name is displayed.
- With "VOL  / VOL " knob, you can select the file you want.
- Press "SEL", then the song you selected will start.

3. Searching Character:

- Press "A/PS" 3 times, then character search mode is activated.
- Press enter "SEL" button, then "A" character is displayed.
- With "VOL  / VOL " knob, you can select the letter you want.
- Press enter "SEL" key longer than 2 sec.
- The song which has same character you selected is displayed.
- With "VOL  / VOL " knob, you can select the song you want.
- Press enter "SEL" key, then the song you selected will start.

Connecting it to Portable MP3 Player

25. USB Port

Using USB cable to connect Your Portable MP3 Player.

26. MULTI-MEDIA CARD (MMC) / SD CARD SLOT

Support MP3 ID3 format music only.

* IMPORTANT INFORMATION:

BECAUSE OF THE GREAT VARIETY OF PRODUCTS WITH USB, SD AND MMC CARD PORTS AND THEIR SOMETIMES QUITE MANUFACTURER-SPECIFIC FUNCTIONS WE CAN NEITHER GUARANTEE THAT ALL DEVICES WILL BE RECOGNIZED NOR THAT ALL OPERATING OPTIONS THAT ARE POSSIBLE IN THEORY WILL ACTUALLY WORK

HOW TO USE BLUETOOTH IN YOUR CAR AUDIO

1. You need to connect your mobile phone and car audio by pairing.
 - A. Press (+) button in Bluetooth Remote Box longer than 6 seconds. The LED in Remote Box will blink fast. This mode is Pairing mode stage.
Note: To deactivate Pairing, Press (+) again longer than 3 seconds. LED will stop blinking.
 - B. Turn on the Bluetooth connection of the mobile phone. Perform Add Bluetooth device. The mobile will search for any Bluetooth devices within the range. Select "NAME_HF" and enter Passkey: "0000" to connect to the car audio. (Please refer to the instruction manual of your mobile phone for Bluetooth Pairing. Your mobile phone should have Bluetooth function otherwise can not do the pairing).
2. After successful pairing, the LED in Bluetooth Remote will blink 1-2 times every 4 sec. This unit is in active mode waiting for incoming call.
3. You can hear ring tone from the car's speaker if there's an incoming call. Press TALK button once to receive call. Press TALK button longer than 2 seconds will disconnect the call.



4. You can talk through Bluetooth Remote Mic and listen through car's speaker and not through your mobile. When talking, the LED in Bluetooth Remote is always on. You can adjust speaker's volume level using VOL +/- button.
5. To hang up, press TALK button once. Unit switch back to active mode again.
6. In active mode, press TALK button twice will redial last outgoing called number.

Here is a listing of current Bluetooth Mobile phones:

Brand	Ericsson	Ericsson	Motorola	Motorola	Motorola	Motorola	Nokia	Nokia	Nokia	Nokia	Nokia	Nokia	Nokia	Nokia
Model	R520m	T39	E398	V3	E1000	E680i	8910	6310i	6600	N-gage	6260	6230	6680	3230
Checked BHF111	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y


Brand	Panasonic	Pantech	SE	SE	SE	SE	SE	SE	SE	SE	SE	SE	Siemens	Siemens
Model	X70	G800	T68i	Z600	T610	T630	P800	P900	P910i	K700i	K750i	W800i	S55	S65
Checked BHF111	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y

- **RESET**

Reset button is placed on the housing.

The reset button is to be activated for the following reason:

 - Initial installation of the unit when all wiring is completed.
- All the function button do not operate.
- Error symbol on the display.

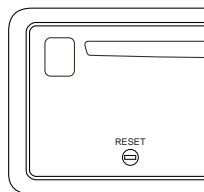

TECHNICAL SPECIFICATIONS

CD/MP3 PLAYER SECTION

Signal to Noise Ratio	> 60dB
Channel Separation	> 50 dB (1kHz)
Frequency Response	20Hz - 20 kHz

LINE-OUT

Output	350mV
Impedance	10kOhm

TUNER (FM)

Frequency range	87.5-108 MHz
Intermediate frequency	10.7 MHz
Sensitivity	2.8 μ V
Stereo separation	35 dB
Signal to noise ratio	55 dB
Channel step	50 kHz

GENERAL

Power Supply	13.8V DC (10.8-15.6V allowable)
Speaker impedance	4 or 8 ohm
Output power	40W x 4CH

Note: Specification and the design are subject to possible modification without notice due to improvements.



Instructions on environment protection

Do not dispose of this product in the usual household garbage at the end of its lifecycle; hand it over at a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instructions for use or the packing will inform about the methods for disposal.

The materials are recyclable as mentioned in this marking. By recycling, material recycling or other forms of re-utilization of old appliances, you are making an important contribution to protect our environment. Please inquire at the community administration for the authorized disposal location.

DENVER ELECTRONICS

ALL RIGHTS RESERVED
COPY RIGHT DENVER ELECTRONICS A/S



www.denver-electronics.com